

INSTALLATION INSTRUCTION

ELLE® Shells Surface Preparation

Product Version:	All
Document ID:	LE-I006
Document Revision:	3.0
Language:	English
Release Date:	2026-08-27
Released by:	SW; CHC, MDG

Imprint

Polytech A/S

Industrivej 75
6740 Bramming
Denmark

Phone: +45 75 10 10 26

www.polytech.com

Company registration number: 10403782

©2026 Polytech A/S®

Distribution and reproduction of this document, exploitation and communication of its contents are prohibited unless expressly permitted. Violations will result in liability for damages. All rights reserved in the event of patent, utility model, or design registration.

All rights reserved.

Brand names and protected trademarks are the property of their respective owners. The naming of brand names and protected trademarks has only descriptive character. Named trademarks are not part of any partnership or cooperation with Polytech.

Table of Content

1. General Information	4
1.1 Change Description	4
1.2 Safety	5
1.2.1 Qualifications of Personnel	5
1.2.2 PPE (Personal Protective Equipment)	5
1.3 Icons and Notes	5
1.4 Required Documentation	6
1.5 Abbreviations	6
2. Preparation	7
2.1 Environmental Conditions	7
2.2 Tools and Consumables	7
3. Installation	8
3.1 Inspection of Smoothing of Blade Surface	8
3.2 Cleaning of Blade Surface	8
3.3 Sanding of Eroded Surface	9
3.4 Mark Up Area for Installation of ELLE®	9
3.5 Wiping of ELLE® Installation Area	9
3.6 Filling of Eroded Area	9
3.7 Curring of Filler	10
3.8 Sanding of Filler Surface	10
3.9 Control of Prepared Area	11
4. Technical Support	12

1. General Information

1.1 Change Description

The table below describes changes compared to the previous revision of the document.

Section	Description
Version 3.0	
Document	Rename document to “ <i>LE-I006 3.0_en ELLE® Shells Surface Preparation</i> ”
All	Rename all incidents of “™” to “®”
<u>1.4 Required Documentation</u>	Update the names in that list (Installation Instruction)
Version 2.0	
Frontpage	Title changed from “Fast Preparation of WTG Blades Before Application of ELLE™” to “Surface Preparation of Blades for Application of ELLE™”.
All	New template. Various editorial changes throughout.
<u>1.3 Icons and Notes</u>	New section added.
<u>1.4 Required Documentation</u>	LE-Q003_Acceptance catalog ELLE™ mounting added.
<u>2.1 Environmental Conditions</u>	Reference to PolyTech TDS ELLE™ added.
All	New document (Version 1.0)

1.2 Safety

1.2.1 Qualifications of Personnel

The table below defines which tasks can be assigned to qualified, trained and instructed personnel.

Task	Personnel
All	Qualified personnel ■ Personnel who, based on their specialist training, knowledge and experience and knowledge of the relevant regulations, are able to assess the work assigned to them and identify possible hazards.
Installation	Trained personnel ■ Personnel trained in the operation and safe use of the product.
Packaging and Transport	Instructed personnel ■ Personnel instructed in the tasks assigned to them.

1.2.2 PPE (Personal Protective Equipment)

Wear PPE as defined in the table below.

	For all tasks Wear foot protection.
	For all tasks Wear eye protection.
	For all tasks Wear protective gloves.
	For tasks where sufficient venting is not possible Wear respiratory protection. ■ Recommended filter type: A2, P2.

1.3 Icons and Notes

The table below defines the meaning of icons that appear in this document.

Icon	Definition
	Caution or Warning Details about risk of personal injury.
	Note Details about risk of property damage.
	Reference to additional documentation.

1.4 Required Documentation

The table below lists other required documentation.

Safety Data Sheet	■ CENTAUR 960 SDS ■ IPA Sprit 99,9% Polytech ■ Sika® Aktivator-205
Technical Data Sheet	■ PolyTech TDS Centaur 960 ■ ELLE® Shells TDS ■ Sika® Aktivator-205
Installation Instruction	■ LE-Q003 ELLE® Shells Acceptance Catalog Installation ■ LE-I002 ELLE® Shells Replacement ■ LE-I003 ELLE® Shells Repair of Detachment ■ LE-I007 ELLE® Shells Installation

1.5 Abbreviations

The table below defines the abbreviations used in this document.

Abbreviation	Full Form
ELLE®	Everlasting Leading Edge
GFRP	Glass-fiber Reinforced Polymer
IPA	Isopropanol Alcohol
PPE	Personal Protective Equipment
SDS	Safety Data Sheet
TDS	Technical Data Sheet
WTG	Wind Turbine Generator

2. Preparation

2.1 Environmental Conditions

The table below defines the temperature and humidity requirements during installation.



Refer to Technical Data Sheets for storage and transportation requirements.

Property	Value	Unit
Ambient temperature	5...35	°C
	41...95	°F
Surface temperature:	5...50	°C
	41...122	°F
Permitted relative humidity	30...90	%

2.2 Tools and Consumables

Tools	
Item	Type
Permanent marker	-
Consumables	
Item	Type
Cleaning agent	Isopropanol 99.9 %
Cloths	Lint-free
Color/varnish	In accordance with specifications of the blade type.
Filler	Depending on ambient temperature: ■ SikaForce®-800 Blue (former SikaForce®-7800 Blue), 5 to 15 °C, - or ■ SikaForce®-800 Red (former SikaForce®-7800 Red), 15 to 35 °C.
Sandpaper	Grit 80 to 120


3. Installation

3.1 Inspection of Smoothing of Blade Surface

Step 1

Inspect blade surface and determine the erosion category.

- For erosion category 1 and 2, continue to Step 2.
- For erosion category 3 and 4, continue to Step 3.

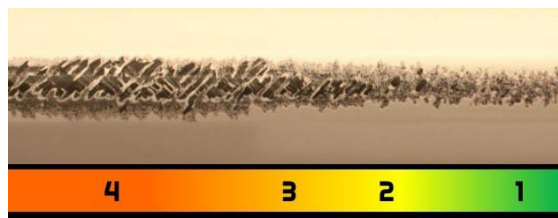

Step 2

Smoothen out the eroded coat so that the surface becomes smooth.


- If any local holes are present, sand the edge and fill it up later.



Step 3

Smoothen out the edge of the eroded area and remove any loose filler, paint and so forth.

- If erosion has damaged the GFRP laminate, a structural repair in accordance with the blade supplier specification is required, before application of ELLE®.

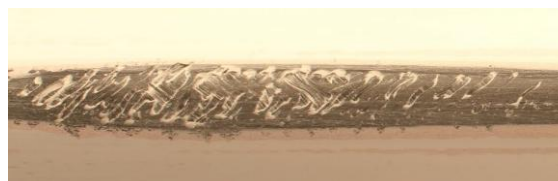

End

3.2 Cleaning of Blade Surface

Before Starting

Note



Surface cleaned with isopropanol will dry out fast.

Surface cleaned with water and soap will take longer time to dry out.

Applying isopropanol to the surface can help evaporate remaining water on the surface.

Step 1

Clean substrate to remove contamination, for instance salt sediment.

Step 2

Use a neutral soap dispersed in water and a brush if the surface is very dirty or full of salt. Otherwise, use isopropanol and a brush to clean the eroded area.

End

3.3 Sanding of Eroded Surface

Before Starting

**Note**

Be careful not to sand surface outside the area where ELLE® must be installed.

Step 1


Sand eroded surface to remove loose fibers, paint chips, tape, adhesive and similar.

End

3.4 Mark Up Area for Installation of ELLE®

Step 1

Edge of ELLE® (1) must extend a minimum of 10 mm (3) from edge of filled/paint free area (2). If this not possible, surface must be painted with topcoat before application of ELLE®.

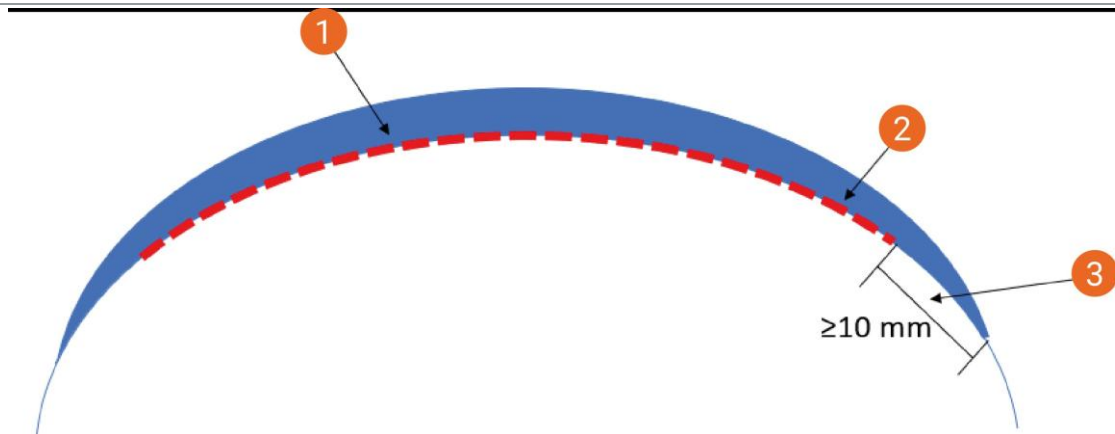

End

3.5 Wiping of ELLE® Installation Area

Step 1

Wipe off the surface with isopropanol and a brush to ensure that the eroded area is cleaned for repair.

End

3.6 Filling of Eroded Area

Step 1


Apply filler and build up original blade profile in the areas with erosion category 3 or higher and local holes remaining after the sanding.

End

3.7 Curring of Filler

Step 1

Let the filler cure until the surface is sand able with sandpaper.

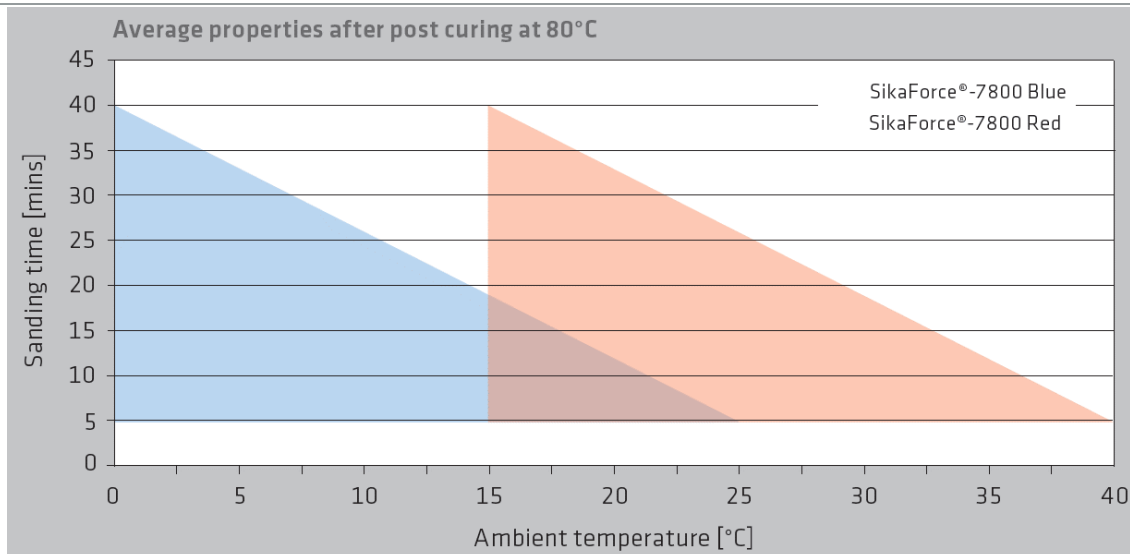

End

3.8 Sanding of Filler Surface

Step 1

Sand the filler with sandpaper so that the surface becomes smooth and regain original aerodynamic profile.




End

3.9 Control of Prepared Area

Step 1

- If the filled area will be within the ELLE® shell with a 10 mm overlap on both sides, the blade is now ready for ELLE® installation in accordance with *LE-I007 ELLE® Shells Installation*.
- If the filled area is wider, the filler needs to be covered with paint in accordance with blade manufacturer specifications before application of ELLE®.

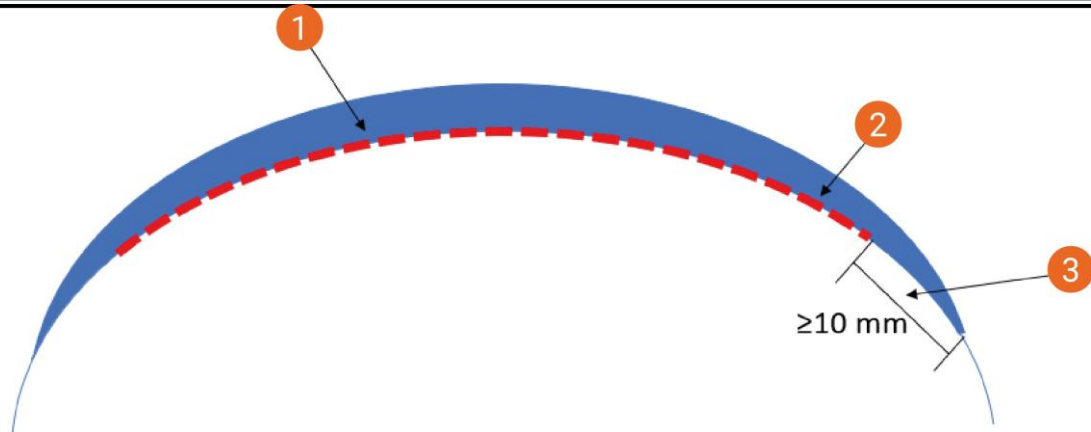

End

4. Technical Support

E-mail

support@polytech.com

Answers will be sent within one working day.

Please include the following information in your support request:

- Product name.
- Product type.
- Serial number.
- Description of the problem, including detailed, high-resolution pictures.